HALO-2C DEMO UPGRADE TO 3C GUIDE

Brought to you by:

1490 North Clinton Ave, Bay Shore NY 11706
www.ipvideocorp.com · info@ipvideocorp.com · 631.969.2601

BEFORE YOU START

INCLUDED PARTS

- HALO-3C
- Mounting Ring
- Protective Pouch for HALO
- IPANIC Button
- 1ft Ethernet Cable
- 4x Mounting Screw
- 4x Locknut

TOOL REQUIREMENTS

- #2 Phillips Screwdriver
- T10 Security Torx Wrench (included)
- 8 mm Wrench

PREPERATION

- Begin by removing the existing HALO-2C from the acrylic case.
  - There are 2 mounting wings that can be accessed by reaching within the Acrylic and pushing into the “Closed” position allowing the user to remove the HALO-2C.
- Unplug the ethernet cable from the HALO-2C.
- Remove the existing 6” ethernet cable from the PoE injector inside the acrylic case.
  - Replace this cable with the included 1ft Ethernet cable.

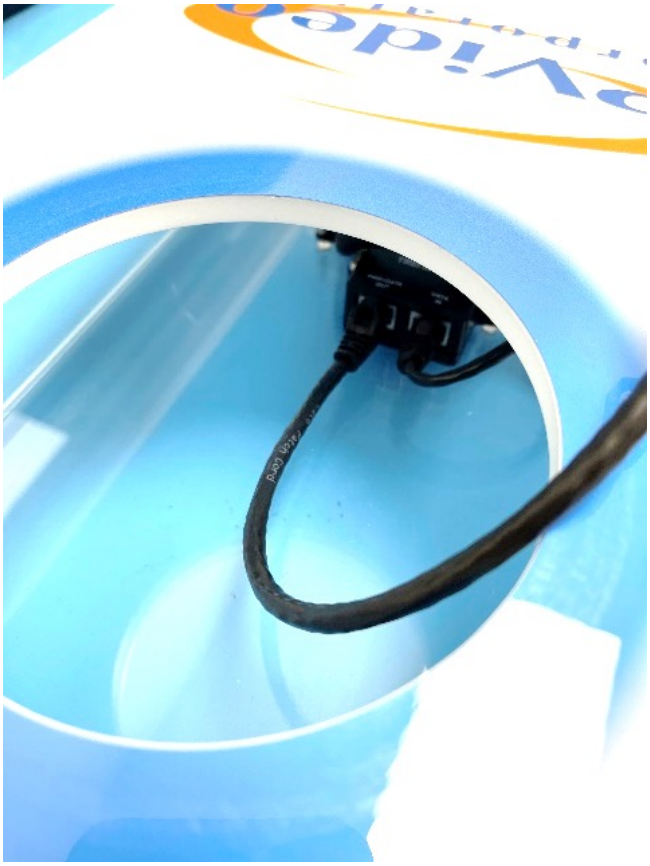

- Once this cable has been replaced, proceed to the installation process.

INSTALLATION

- From inside the bottom opening of the acrylic case, place the provided mounting ring inside the existing 5” cutout.
- Inside the box of the HALO-3C, there is a mounting plate. Place this mounting plate on top of the mounting ring. Users will find that the hole pattern on both pieces align.
    - If the holes do not align, rotate the mounting ring until all 4 mounting holes line up.

- Using the included mounting screws, place all 4 through the aligned holes.
- From inside the acrylic case, use the included locknuts and hand tighten to each mounting screw. This will allow the mounting ring to rotate into the correct position before locking into place.
- Spin the mounting plate so that the center line seen below is perpendicular to the bottom of the acrylic case.

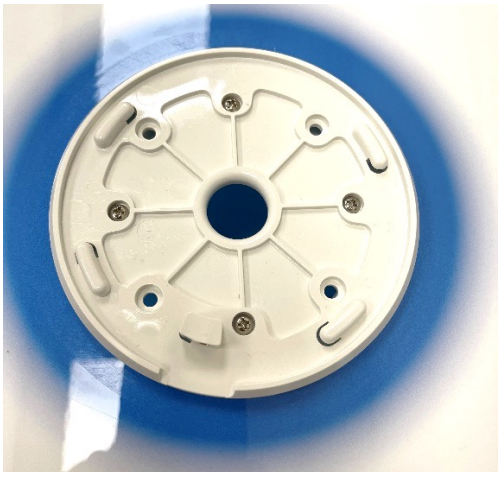

- Using an 8 mm wrench and Phillips screwdriver, tighten the nuts so the mounting plate can no longer rotate.
  - ***NOTE* over tightening may affect mounting functionality**
- From inside the bottom opening of the acrylic case, feed the 1ft ethernet cable through the hole in the center of the mounting ring.

- Plug the ethernet cable into the HALO-3C. Ensure ethernet cable goes into the “IN” port on the HALO-3C.

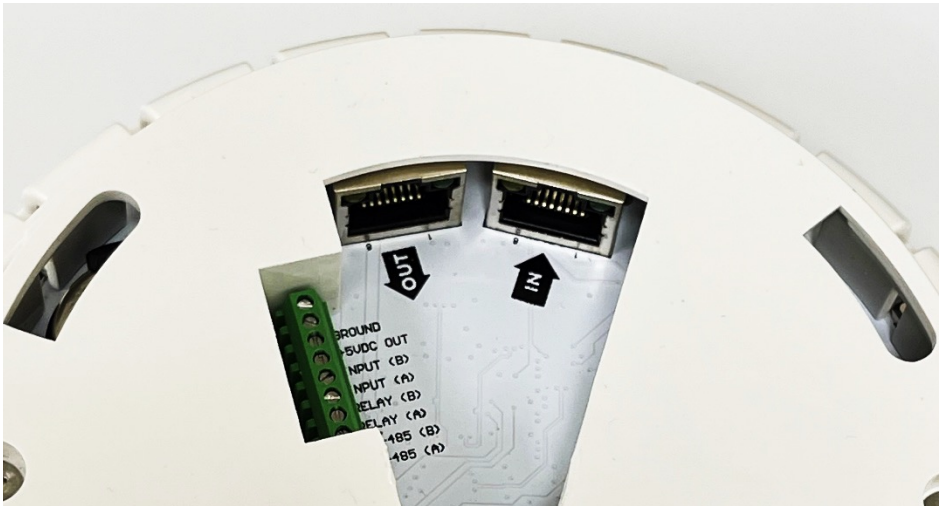

- Place the HALO-3C onto the mounting plate and rotate into place.

- Users can use the included protective pouch when HALO-3C does not need to be attached to acrylic case.
- The protective pouch will fit into the acrylic case for storage.